

SAFETY INSTRUCTIONS

WARNING

1. Risk of property damage, injury or death. Installation, service, and maintenance must be performed by a qualified service technician.
2. 120 Volts may cause serious injury from electric shock. Disconnect electrical power before starting installation or servicing. Leave power disconnected until installation/service is completed.
3. The unit must be mounted in an upright position. Do not mount the unit with the access door facing down.
4. Sharp edges may cause serious injury from cuts. Use care when cutting plenum openings and handling duct work.
5. Inhalation of toxic gases or fumes can be harmful. The fresh air intake must be mounted in a location removed from sources of dangerous toxic gases. All ducting must be separate from other household exhaust systems.
6. Insufficient combustion air may cause toxic conditions. The unit must not exhaust air from an enclosed room with combustion appliances.
7. Excess negative or positive pressure may cause health problems or structural damage. The airflow must be balanced after installation.
8. Dropping may cause personal injury or equipment damage. Handle with care and follow installation instructions.

CAUTION

1. Read all instructions before beginning installation.
2. The installation must conform to all applicable codes.
3. The fresh air duct from outside and to the house and the stale air duct from the unit to the outside must be fully insulated to prevent condensation from forming on the duct work.

TABLE OF CONTENTS

Safety Instructions	1	Balancing the System	8
Specifications	2	Equipment Required	8
Unpacking and Contents	2	Balancing Airflow	9
Location Considerations	3	System Start-up	10
Mechanical Installation		Constant On Operation	10
Wall Mount	4	Operation with Home Comfort Control™	10
Ceiling Mount	5	Operation with 8120 Ventilation Controller	
Ducting	6	or Third-Party Control	10
		Troubleshooting	12

READ AND SAVE THESE INSTRUCTIONS


SPECIFICATIONS

Dimensions	Unit – 37-7/16" W x 12-3/4" D x 20-9/16" H EnergyMax Transfer Core – 12-1/8" x 12-1/8" x 10-3/4"
Weight	75 lbs.
Performance	77% Apparent Sensible Effectiveness (ASE) At rated ventilation capacity with 72°F indoor temperature and 32°F outdoor temperature.
Capacity	Maximum home size per ASHRAE Standard 62.2-2010* with continuous operation at rated airflow: 4-5 bedrooms – 7,500 ft², 6-7 bedrooms – 6,000 ft², 7+ bedrooms – 4,500 ft². <i>*No infiltration credit assumed. Refer to the standard for details on required ventilation rates.</i>
Power	120 VAC, 1.4 Amp maximum. Unit equipped with 3 ft. grounded power cord.
Filter	Two 10-13/16" x 11-5/16" x 3/32" EZ Klean air filters. Filters coated with Super Filter Coat adhesive.
Airflow	120 cfm at 0.30" w.c. external pressure.

UNPACKING AND CONTENTS


1. Open one end of the carton.
2. Remove the cardboard inner pack.
3. See **Figure 1** for carton contents.
 - a. Inner pack
 - b. Energy Recovery Ventilator
 - c. Installation Instructions
 - d. Owner's Manual
 - e. Mounting Hardware Carton
4. See **Figure 2** for contents of mounting hardware carton.
 - a. Mounting Bracket
 - b. Hanging Hook Bracket
 - c. Hanging Hinge Bracket
 - d. Hanging Pins and Threaded Nuts
 - e. Machine Screws
 - f. Lag Bolts and Washers

FIGURE 1 – Opening View and Contents

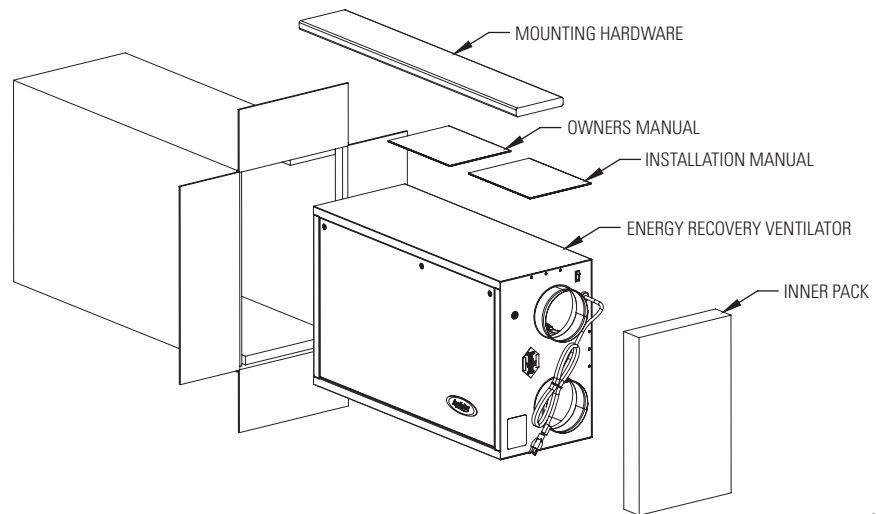

90-1751

FIGURE 2 – Mounting Hardware

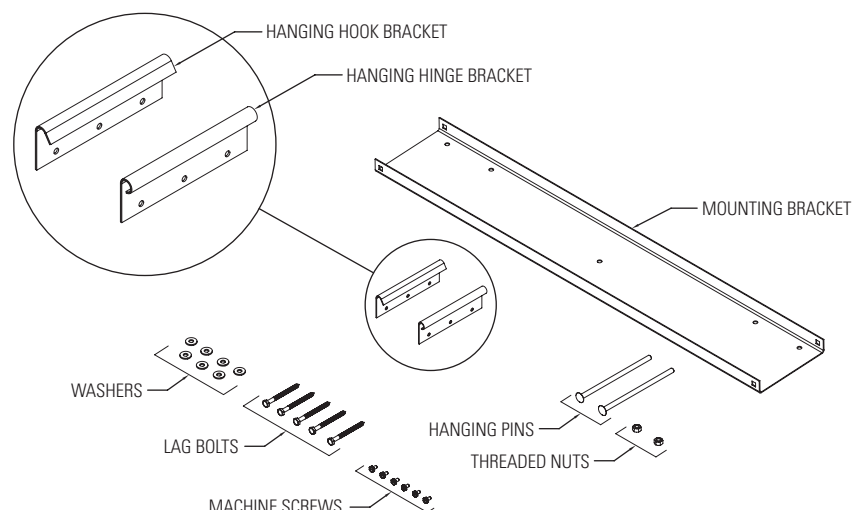


90-1739

LOCATION CONSIDERATIONS

1. **Install Unit Indoors:** It is recommended that the Model 8100 ERV be mounted in a conditioned space. If the unit is mounted in an area where the temperature may drop below 32°F or exceed 100°F, **all duct work in the unconditioned space must be insulated.**
2. **Mounting:** The recommended mounting location is on the basement foundation wall, or a stud wall with easy access to the HVAC system. The unit may also be mounted to basement ceiling joists.
3. **Mounting Kit:** The unit must be mounted with the mounting kit provided.
4. **Power:** Outlet within 30" of unit.
5. **Service Clearances:** Allow a minimum of 36" clearance around the access door. Allow for 12" of clearance to access duct connections, on/off switch and wiring connections. (See **Figure 3.**)

FIGURE 3 – Dimensions and Location Considerations

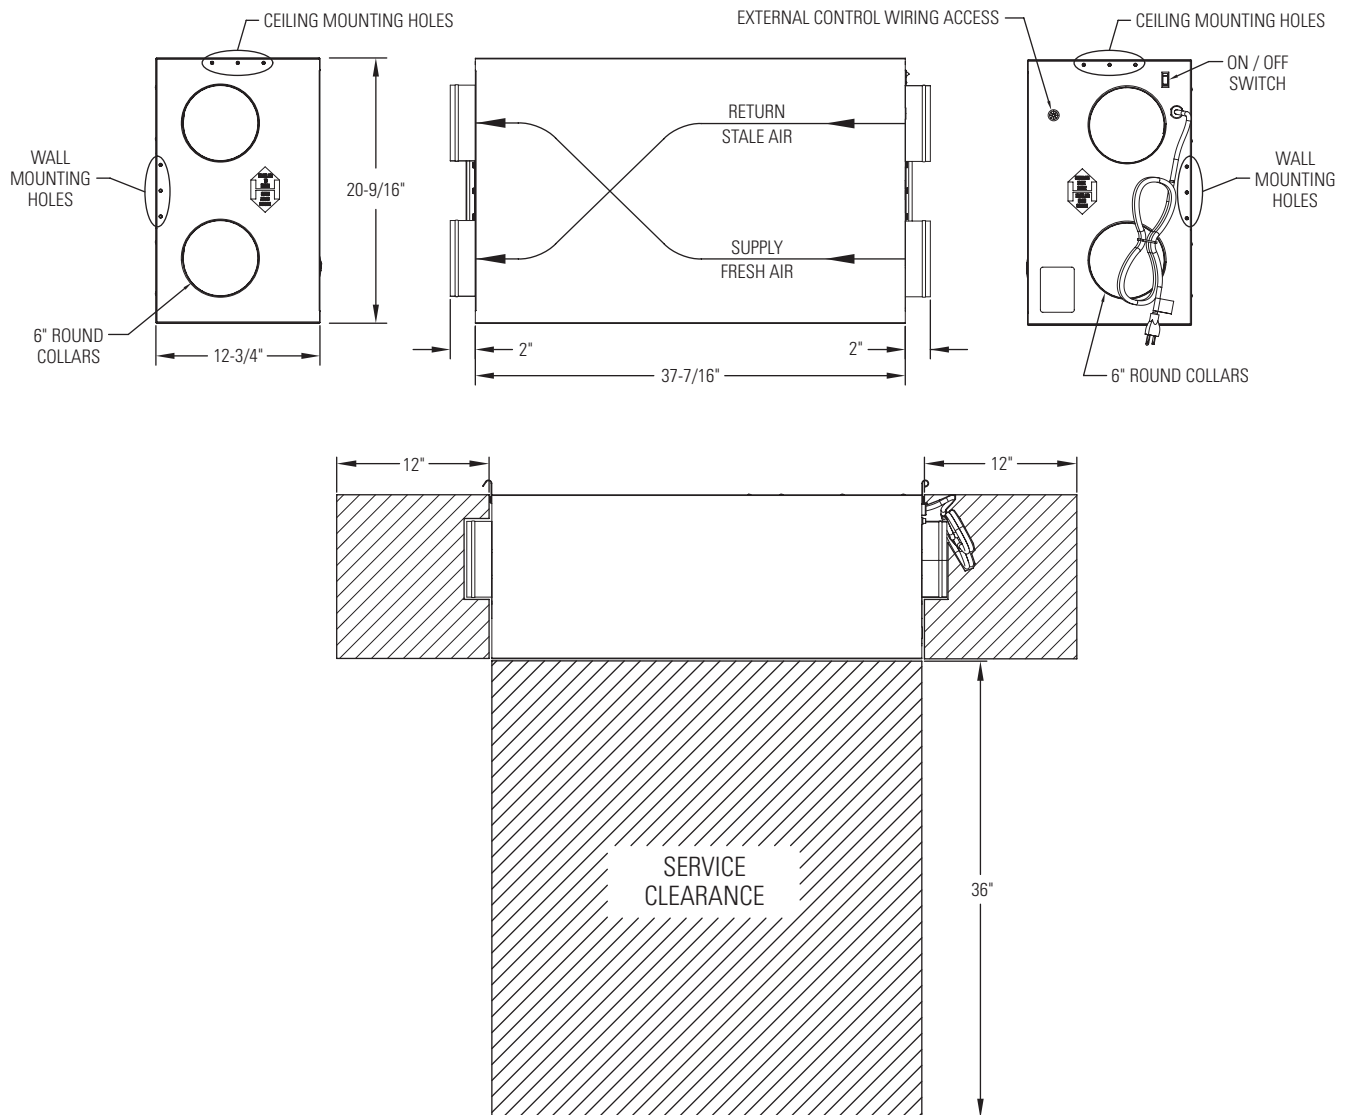

90-1743


MECHANICAL INSTALLATION

WALL MOUNT

The unit can be mounted on a concrete wall or on a stud wall. The mounting bracket is pre-drilled for fastening to standard 16" O.C. or 24" O.C. stud spacing. Remove the access panel, EnergyMax Transfer Core, and air filters for installation.


1. Remove the access panel, EnergyMax Transfer Core and filters. (See **Figure 4**.)
2. **For Stud Wall:** Fasten the supplied mounting bracket to the wall using the supplied lag bolts and washers. (See **Figure 5**.)
For Concrete Wall: Fasten the supplied mounting bracket to the wall using field supplied concrete anchors and the supplied lag bolts and washers.
3. Insert the supplied hanging pin in the left hole of the mounting bracket and secure by inserting the supplied washer and hand tightening with the supplied nut. (See **Figure 5**.)
4. Insert the supplied hanging pin in the right hole of the mounting bracket. (See **Figure 5**.)
5. Fasten the hanging hook bracket to the left side of the unit with the supplied 10-32 x 3/8" machine screws, using the pre-tapped holes along the side of the unit. (See **Figure 6**.)
6. Fasten the supplied hanging hinge bracket to the right side of the unit with the supplied 10-32 x 3/8" machine screws, using the pre-tapped holes along the side of the unit. (See **Figure 6**.)
7. Pick the unit up and hook the hanging hook bracket on the left hanging pin. (See **Figure 7**.) **Note: Keep pressure against the unit to prevent it from swinging away from the wall.**
8. Push the unit against the bracket, remove the right side pin, align the hanging hinge hook with the bracket and reinsert the hanging pin. Secure the pin by inserting the supplied washer and tightening the supplied nut. (See **Figure 8**.)
9. Securely tighten the nut on the left side of the unit.
10. Reinstall the EnergyMax Transfer Core, air filters and access panel.

FIGURE 4 – Removing Core and Filters

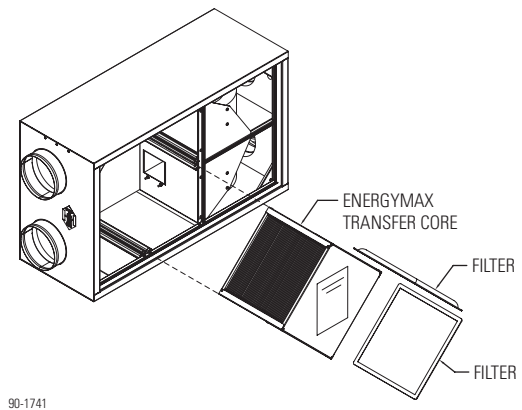



90-1741

FIGURE 5 – Installing Mounting Bracket on Wall

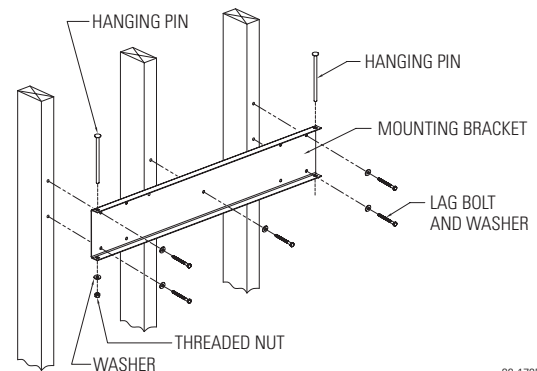


90-1735

FIGURE 6 – Installing Mounting Brackets

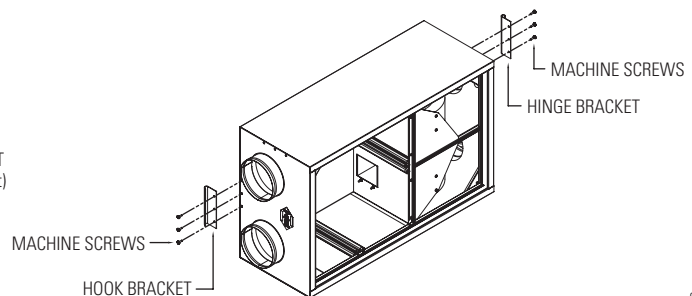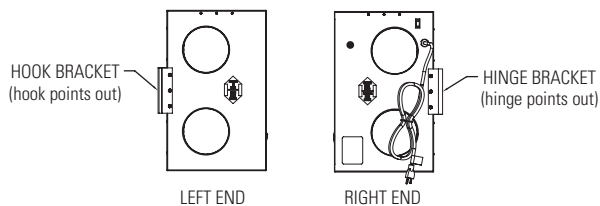


90-1734

FIGURE 7 – Hanging Left Side of ERV

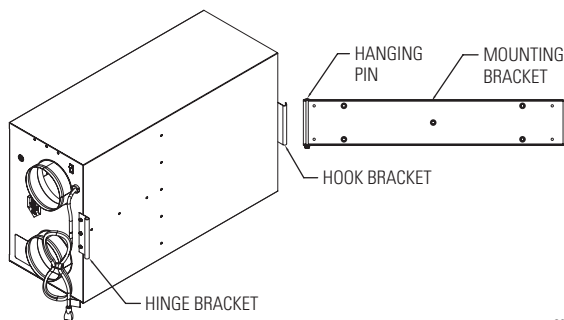

90-1742

FIGURE 8 – Hanging Right Side of ERV

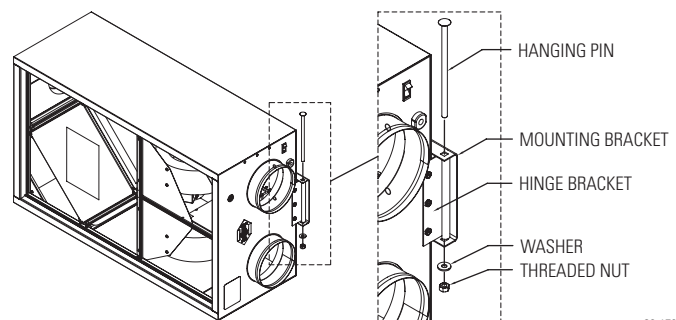

90-1736

MECHANICAL INSTALLATION (CONTINUED)

CEILING MOUNT

The unit can be mounted on ceiling joists. The mounting bracket is pre-drilled for fastening to standard 16" O.C. or 24" O.C. ceiling joists. Remove the access panel, EnergyMax Transfer Core, and air filters for installation. **CAUTION: Do not mount the ERV to ceiling I-beam wood trusses.**

1. Remove the access panel, EnergyMax Transfer Core and filters. (See **Figure 9.**)
2. Fasten the supplied mounting bracket to the ceiling joists using the supplied lag bolts and washers. (See **Figure 10.**)
3. Insert the supplied hanging pin in the left hole of the mounting bracket and secure by inserting the supplied washer and hand tightening with the supplied nut. (See **Figure 10.**)
4. Insert the supplied hanging pin in the right hole of the mounting bracket. (See **Figure 10.**)
5. Fasten the hanging hook bracket to the top of the left side of the unit with the supplied 10-32 x 3/8" machine screws, using the pre-tapped holes along the side of the unit. (See **Figure 11.**)
6. Fasten the supplied hanging hinge bracket to the right side of the unit with the supplied 10-32 x 3/8" machine screws, using the pre-tapped holes along the side of the unit. (See **Figure 11.**)
7. Pick the unit up and hook the hanging hook bracket on the hanging pin. (See **Figure 12.**) **Note: Keep pressure against the unit to prevent it from swinging away from the ceiling.**
8. Push the unit up against the bracket, remove the right side pin, align the hanging hinge hook with the bracket and reinsert the hanging pin. Secure the pin by inserting the supplied washer and tightening the supplied nut. (See **Figure 13.**)
9. Securely tighten the nut on the left side of the unit.
10. Reinstall the EnergyMax Transfer Core, air filters and access panel.

FIGURE 9 – Removing Core and Filters

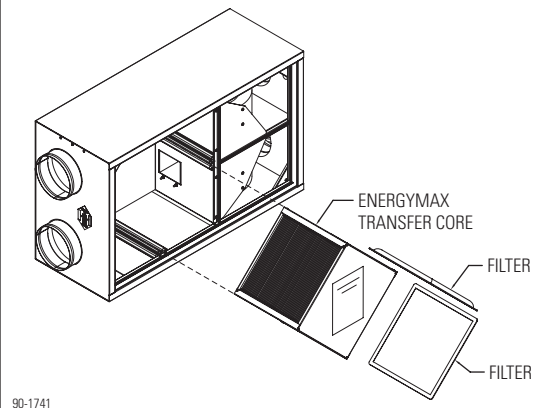


FIGURE 10 – Installing Mounting Bracket on Ceiling

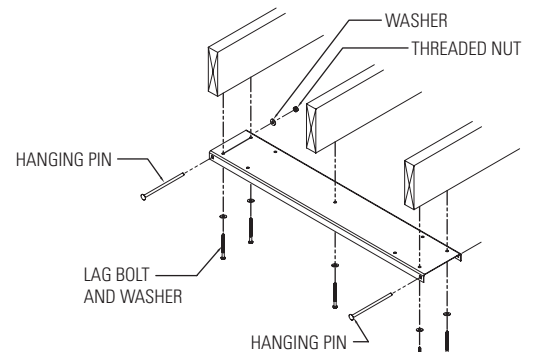


FIGURE 11 – Installing Mounting Brackets

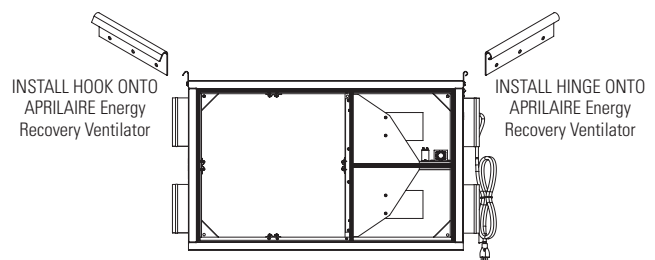
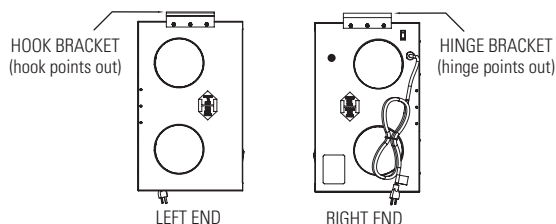


FIGURE 12 – Hanging Left Side of ERV


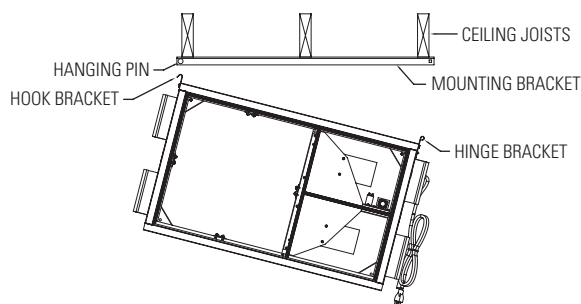


FIGURE 13 – Hanging Right Side of ERV

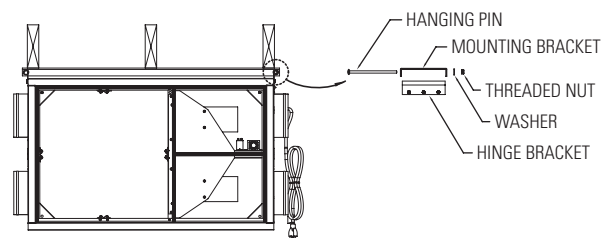

MECHANICAL INSTALLATION (CONTINUED)

DUCTING

DUCT WORK SPECIFICATIONS

- Plan on temporarily installing two air flow measuring devices. The system will have to be balanced (**BALANCING THE SYSTEM SECTION**), after all duct work has been installed. The measuring devices are removed after the system has been balanced.
- A sound absorber at least 6 ft. long, consisting of 1" thick rigid fiberglass duct or insulated flexible duct is recommended for maximum absorption of air movement sounds between the unit and the living space return grille.
- All flexible ducts must meet UL safety standards for Class 1 air ducts and connectors.
- All ducting must be installed according to local HVAC codes and standards.
- Round 6" galvanized duct or equivalent is recommended for all duct runs that do not require insulation.
- All ducting located in an unheated space must be completely sealed and insulated.
- For optimum performance and quiet operation, all duct runs should be kept as short, straight, and equal in length as possible.
- If the ERV will not be running continuously, a field supplied butterfly damper must be installed in the intake duct near the hood.


GRILLE AND HOOD SPECIFICATIONS

- The living space return grille should not be less than 75 in² of free area. Grille surfaces less than this may produce excess air noise.
- Exterior intake and exhaust hoods must be weather resistant. The hoods must also incorporate a screen to prevent unwanted debris, animals, and insects from entering the duct work. The screen should have a maximum of ¼" openings.
- Caulk both hoods to prevent water leakage.
- Intake and exhaust hoods should be above the expected snow line or a minimum of 18" above ground level, whichever is greater.

DUCT WORK CONNECTIONS – FORCED AIR SYSTEM

- All duct collars are clearly labeled and must be connected properly.
- Rigid duct work should be connected to the collars with sheet metal screws.
- Flexible duct work must be connected with clamps or bands.
- All duct connections should be sealed with duct tape or mastic to prevent leakage.

FIGURE 14 – Fully Ducted Energy Recovery Ventilator

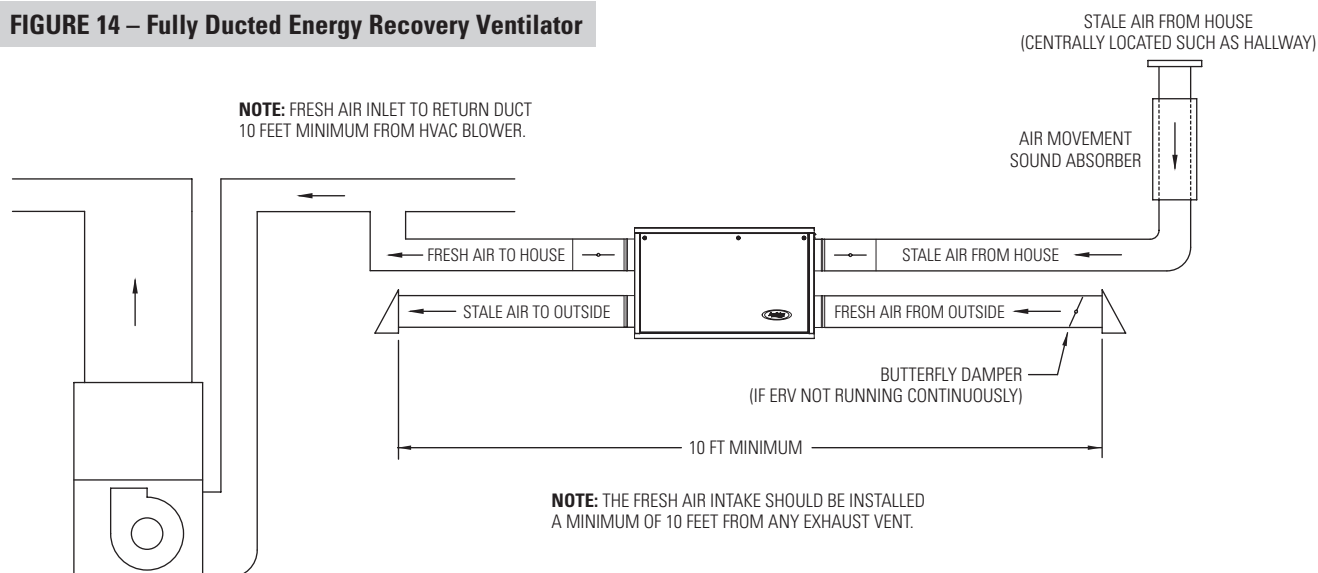

90-1747


MECHANICAL INSTALLATION (CONTINUED)

DUCTING (CONTINUED)

RETURN: FROM LIVING SPACE TO ERV

- Stale air from the house should be exhausted from one exhaust grille centrally located, such as a hallway. For multi-floor homes, the exhaust grille should be located on the same floor as the kitchen.
 - To keep the core free of grease, the ERV duct work must not be connected to a kitchen exhaust fan duct.
 - The ERV duct work should remain separate from bathroom exhaust fan ducts.
 - 6" round, galvanized duct work recommended. If rectangular duct is used, it must have an equivalent air flow rating.
 - A sound absorber at least 6 ft. long, consisting of 1" thick rigid fiberglass duct or insulated flexible duct is recommended for maximum absorbing of air movement sounds between the unit and the living space return grille.
1. Install a balancing damper in the duct near the ERV.
(See **Figure 15.**)
 2. Complete the Return ducting.

FIGURE 15 – Damper in ERV Return

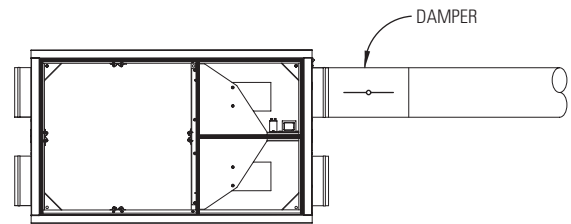


90-1747

SUPPLY: FRESH AIR FROM ERV TO HOUSE

- It is recommended that the supply duct be connected directly to the HVAC return duct, a minimum of 10' from the HVAC blower.
 - 6" round, galvanized duct work is recommended.
1. Install a balancing damper in the duct near the ERV.
(See **Figure 16.**)
 2. Complete the Supply ducting. Using a collar for the duct connection to the HVAC return duct is recommended.

FIGURE 16 – Damper in ERV Supply

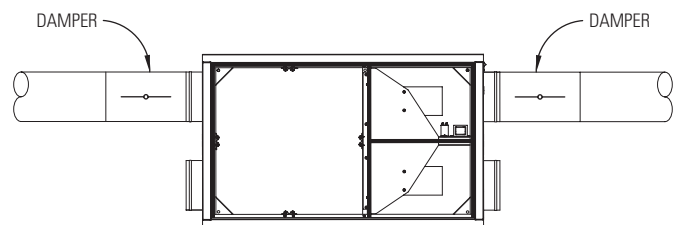


90-1753

OUTDOOR: EXHAUST AND FRESH AIR CONNECTIONS

- Insulated duct of at least R-4 insulating value with a continuous vapor barrier must be used for both duct runs connecting the ERV to the outdoors. The vapor barrier must be sealed at both ends and extend from the ERV housing to the outer wall. (See **Figure 17.**)

FIGURE 17 – Ducting to Outdoors

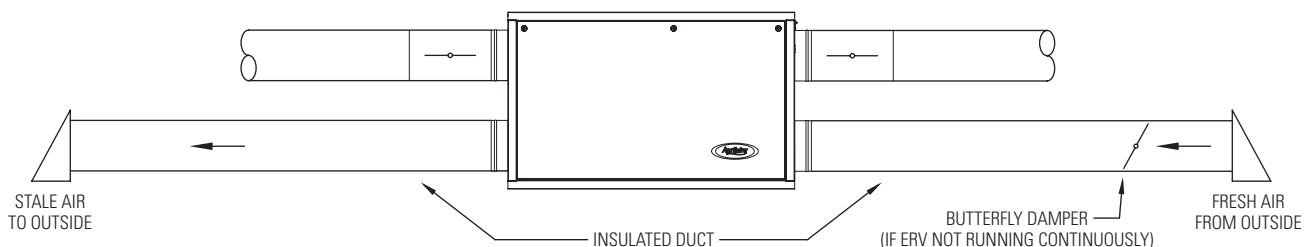


90-1747

MECHANICAL INSTALLATION (CONTINUED)

DUCTING (CONTINUED)

- The intake and exhaust hoods must be located at least 10 ft. apart to avoid cross contamination. (See **Figure 18.**)
- Intake and exhaust hoods should be above the exposed snow line or a minimum of 18" above ground level, whichever is greater. (See **Figure 18.**)
- The intake hood should be a minimum of 10 ft. from an appliance vent that exhausts toxic fumes. The hood should not be installed near sources of pollution and/or extreme temperatures, such as furnace exhaust, car exhaust, dryer vents, etc.
- Do not connect the ERV exhaust to any gas appliance flue.
- Do not connect the exhaust outlet into an attic, storage or garage space. Excess moisture could develop in these areas, possibly causing damage to the home.
- If not running continuously, a field supplied butterfly damper must be installed in the intake duct near the hood. (See **Figure 17.**)

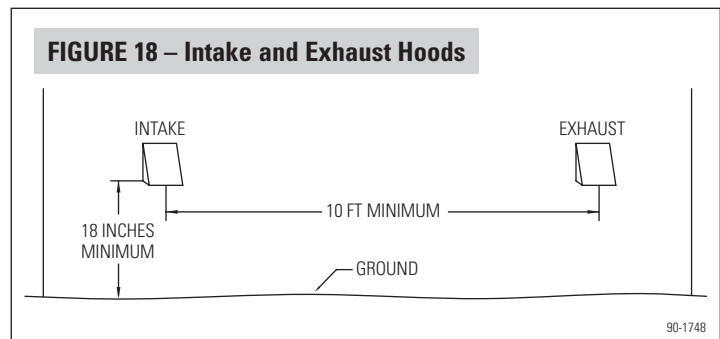

DUCT WORK CONNECTIONS WITHOUT FORCED AIR

- All the ducting connection procedures apply, with the exception of the following changes:
- The fresh air supply can be ducted to various parts of the home, where fresh air is needed.
- It is recommended that no more than 3 fresh air supply ducts be used to assure adequate airflow.
- The total free area of supply grilles should not be less than 75 in². For example: Three supply ducts would require a minimum of 25 in² of free area each.
- Do not place a supply outlet in the same room or in the vicinity of the stale air return from the house.
- It is recommended that the fresh air supply be in a hall or foyer to avoid drafts and blower noise in occupied areas.

BALANCING THE SYSTEM

In order for the ERV to perform effectively, the volume of fresh air supplied to the house must match the volume of stale air exhausted. Because the duct work in the two airstreams will most likely be different, the system must be balanced. Balancing is accomplished by installing dampers in both airstreams, measuring the airflow, and dampering down the airflow in the stream with the highest flow, until the airflow in both streams is the same.

The following procedure is the recommended method. Other measuring instrumentation may be used if it is accurate enough to balance the airflow in the supply and exhaust streams to within 10% of each other.

EQUIPMENT REQUIRED

- Two Dwyer Magnahelic Differential Pressure Gauges; Series 2000, 0-0.25" w.c. (or equal). Note: Do not use a standard differential pressure gauge that reads above 0.25" w.c. The reading will not be accurate for the airflow required by the ERV.
- Two Research Products' airflow measuring devices, Part Number 5158.
- 3/16" ID flexible tubing.
- Drill with 7/8" bit.

Before balancing the system, verify the following:


1. Make sure the EnergyMax Transfer Core and filters are installed correctly.
2. Check all duct work connections to be sure they are installed and sealed properly.
3. Fasten door securely to housing.
4. Place all dampers in the fully open position.

BALANCING THE SYSTEM (CONTINUED)

BALANCING AIRFLOW

1. Drill a 7/8" hole in the return and supply ducts.
2. Install the two airflow measuring devices in the duct using the drilled holes and seal with tape. Verify the airflow arrows are pointed in the direction of airflow. The measuring devices should be a minimum of 2-1/2' from the damper in a 5' section of straight duct. (See **Figure 19**.)
3. Set up the pressure gauges so that they are vertical and level and adjust to zero.
4. Connect the tubing from the airflow measuring devices in the ducts to the pressure gauges (see **Figure 19**). The high pressure tap on the airflow measuring device must be connected to the high pressure tap on the pressure gauge. Similarly, connect the low pressure tap on the measuring device to the low pressure tap on the pressure gauge.

FIGURE 19 – Set-up for Balancing Airflow

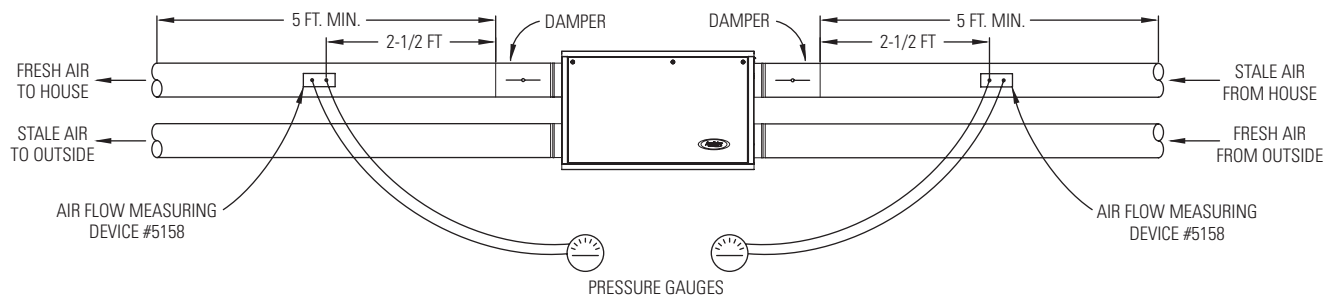

90-1746

5. Verify the dampers are in the fully open position.
6. Turn off the HVAC system blower and any other exhaust fans.
7. Plug in and turn on the unit.
8. Read the pressure gauges. If the gauge readings are the same, the system is balanced and does not require further adjustment. Proceed to Step 10.
9. If the readings are different, slowly close the damper on the duct with the higher gauge reading until the two readings are identical. When the readings are the same, the system is balanced.
10. See **Table 1** for approximated airflow based on pressure gauge readings.
11. Secure the damper positions to prevent them from changing during operation.
12. Disconnect the tubing and pressure gauges and remove the airflow measuring devices. Seal the duct openings where the measuring devices were located.

Table 1 – Airflow Approximations
Airflow in a 6" Duct as Measured using
Airflow Measuring Device #5158

Gauge Readings (in. w.c.)	Airflow (cfm)	Gauge Readings (in. w.c.)	Airflow (cfm)
0.005	30	0.065	119
0.010	44	0.070	124
0.015	55	0.075	128
0.020	64	0.080	132
0.025	72	0.085	137
0.030	80	0.090	141
0.035	86	0.095	145
0.040	93	0.1	149
0.045	98	0.105	152
0.050	104	0.110	156
0.055	109	0.115	160
0.060	114	0.120	163

NOTE: If airflow is restricted by more than 20% (see **bold** values in **Table 1**), check ductwork and connections to increase flow.

SYSTEM START-UP

The Energy Recovery Ventilator has an on/off switch which enables the unit to be constantly on. There is also wiring access and wire leads available in the unit for connection to the Aprilaire Home Comfort Control™, Aprilaire Model 8120 Ventilation Controller, or any third-party 24VAC, dry contact, normally open external control to allow the unit to provide fresh air when needed in accordance with the 62.2-2010 ASHRAE Standard. The 62.2-2010 ASHRAE Standard uses home size and the number of bedrooms to determine the required ventilation rate.

CONSTANT ON OPERATION

1. Plug in the power cord to a 120VAC grounded outlet.
2. Turn on/off switch on.


OPERATION WITH HOME COMFORT CONTROL™ (FIGURE 20)

1. Remove the front panel of the ERV.
2. Remove the wire nut from the two yellow wires.
3. Run 2-wire cable (18-24 AWG) from the ERV to the Home Comfort Control™.
4. Insert the wire through the ERV wire access port.
5. Use wire nuts to connect each end of the 2-wire cable to each of the yellow wires from the ERV.
6. Replace the ERV front panel.
7. Connect the other end of the 2-wire cable to the VENT terminals of the Home Comfort Control™.
8. Reference the Home Comfort Control™ Installation Instructions to set the ventilation timing per the 62.2-2010 ASHRAE Standard.
9. Plug in the ERV.
10. Turn the on/off switch ON.

OPERATION WITH 8120 VENTILATION CONTROLLER OR THIRD-PARTY CONTROL (FIGURE 20)

1. Remove the front panel of the ERV.
2. Remove the wire nut from the two yellow wires.
3. Run 2-wire cable (18-24 AWG) from the ERV to the 8120 or Third-Party Control.
4. Insert the wire through the ERV wire access port.
5. Use wire nuts to connect each end of the 2-wire cable to each of the yellow wires from the ERV.
6. Replace the ERV front panel.
7. Connect the other end of the 2-wire cable to the A/A terminals of the 8120 Ventilation Controller. If using a Third-Party Control, reference the Third-Party Control Installation Instructions to connect to the control.
8. Use the tables below to determine the airflow requirement and cycle time to meet the 62.2-2010 ASHRAE Standard.
 - a. **Table 2** on the following page shows the required ventilation rate in CFM.
 - b. **Table 3** on the following page shows the required ventilation cycle time in minutes based on a 1 hour cycle using the airflow determined in **Table 1**.
9. Plug in the ERV.
10. Turn the on/off switch ON.

FIGURE 20 – Wiring to External Control

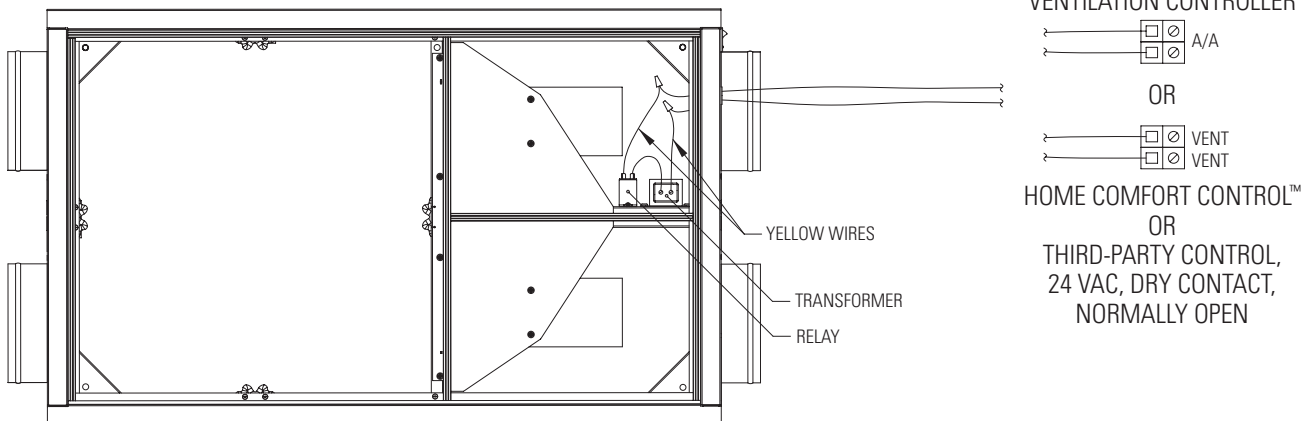

90-1749

SYSTEM START-UP (CONTINUED)

Table 2 – Ventilation Air Requirements, CFM

Home Size (ft²)	Number of Bedrooms				
	< 2	2 - 3	4 - 5	6 - 7	> 7
≤ 1500	30	45	60	75	90
1501 – 3000	45	60	75	90	105
3001 – 4500	60	75	90	105	120
4501 – 6000	75	90	105	120	135
6001 – 7500	90	105	120	135	150
> 7500	105	120	135	150	165

Table 3 – Cycle Time Setting (minutes)

CFM Delivered (refer to Table 1)	CFM Required (from Table 2)										
	20	30	40	50	60	70	80	90	100	110	120
100	15	20	25	30	35	40	50	55	60		
120	10	15	20	25	30	35	40	45	50	55	60
140	10	15	15	20	25	30	35	40	45	50	55
160	10	10	15	20	25	25	30	35	40	45	50

Example: For a 4,000 ft² home with 5 bedrooms, the required mechanical ventilation rate from Table 2 is 90 cfm. If the ERV is operating at 120 cfm, set the cycle time on the control for at least 45 minutes/hour.

TROUBLESHOOTING

Technical Support is available Monday through Friday, 7:00 a.m. to 5:00 p.m. CST, at (800) 334-6011. Use the guide below to help find and correct system faults and then contact Technical support before replacing the unit or components or for additional troubleshooting.

Table 4 – Troubleshooting Guide

Symptom	Possible Reason	Troubleshooting Procedure
ERV will not turn on.	No power to blower.	• Check that the ERV is plugged in. • Check that the power switch on the ERV is ON. • If wired to an external control, verify wire connections inside ERV and at control. • Connect the two yellow wires in the ERV. If the blower turns on, the problem resides with the external control. Troubleshoot the control in accordance with the manufacturer's instructions.
ERV blower is running, but little or no airflow.	Incorrect damper position.	• Verify that the dampers are not closed. • Check for blocked duct work and clear.



P.O. Box 1467 • Madison, WI 53701-1467 • Phone: 800/334-6011 • Fax: 608/257-4357 • www.aprilairepartners.com